


Installation Scheme for Descaling, Chlorine, & Chloramine Systems

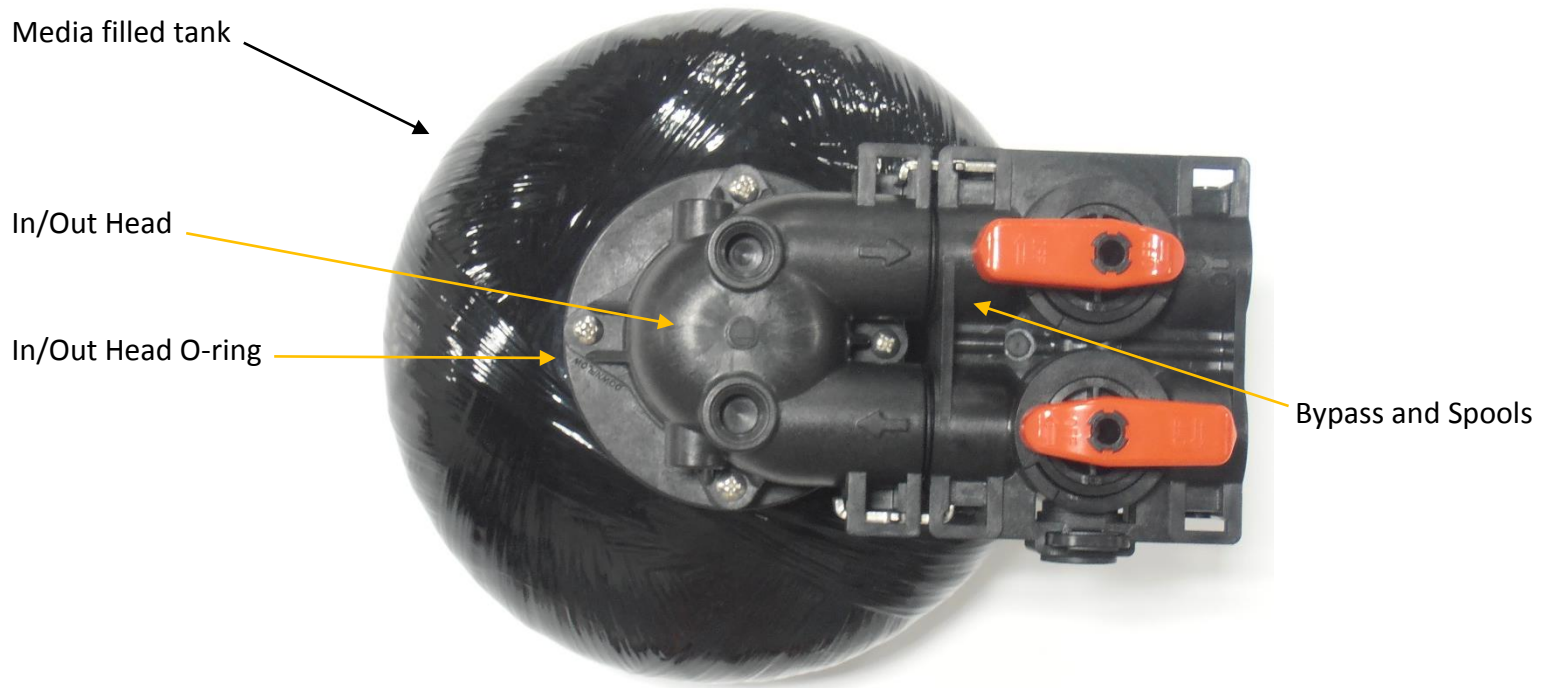

Maintenance

Media will need to be replaced when it reaches its saturation point. Consult with your water treatment specialist to determine replacement date. Replacement will depend on your water quality and how much water is used.

- Turn main water valve off.
- Put valve in bypass, turn water faucet on to release pressure from the system.
- Remove metal clips and disconnect bypass from in/out head.
- Unscrew in/out head and lift from media tank. Upper basket should be attached.
- Remove distributor tube and lower basket, set aside.
- Remove water and media.
- Reinstall the distributor tube and lower basket assembly. Tape tube so new media will not go into the tube, then pour in replacement media recommended by your water treatment dealer.
- Replace upper basket if damaged.
- Reinstall or replace in/out head O-ring.
- Slide upper basket and in/out head over the distributor tube and screw to media tank.
- Reattach bypass to in/out head using the spools and metal clips to secure.
- Turn main water supply on and slowly turn bypass into service to fill the tank and avoid water hammering.